

Accessories

Intel:

Screws (M3) x 2




Push pins x 4



Push pins x 4



Mounting plate x 1

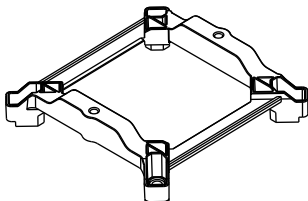


AMD:



Screws (M3) x 2











Lugs x 2

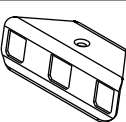

Preparation

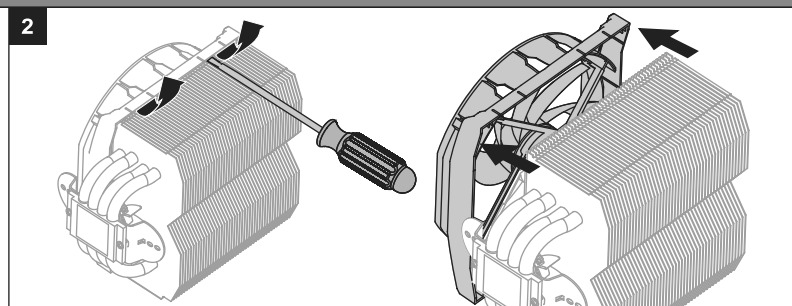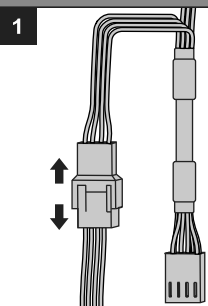


For Intel Sockets

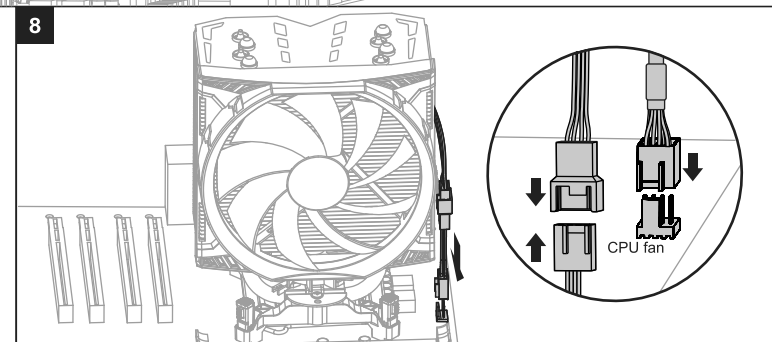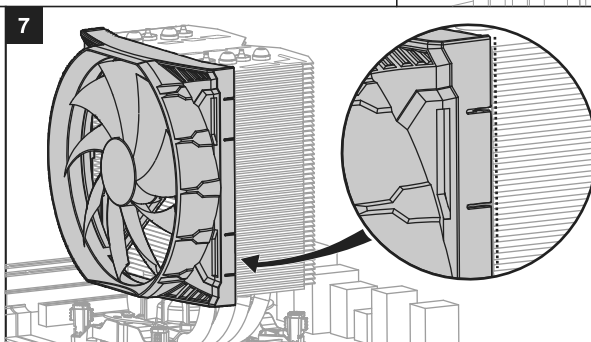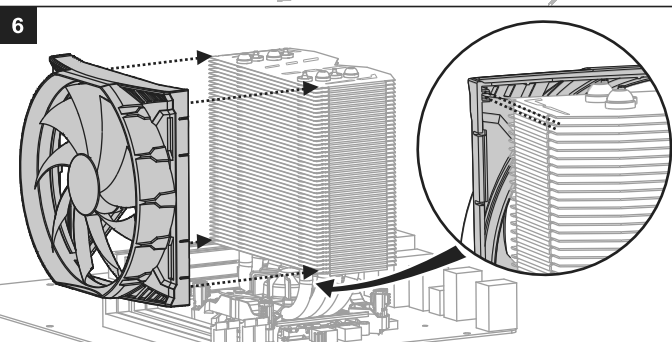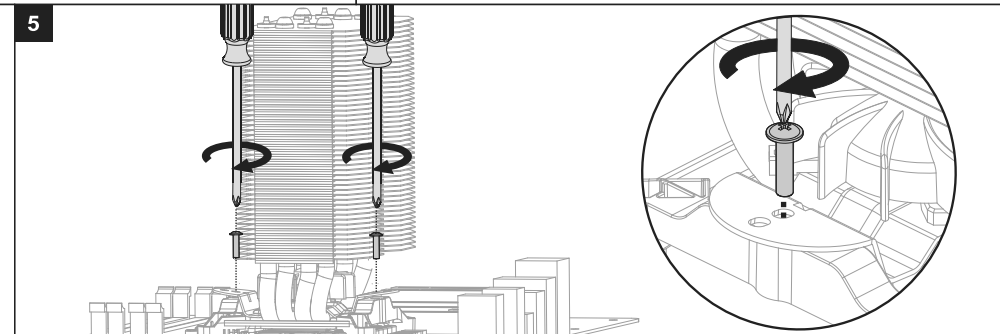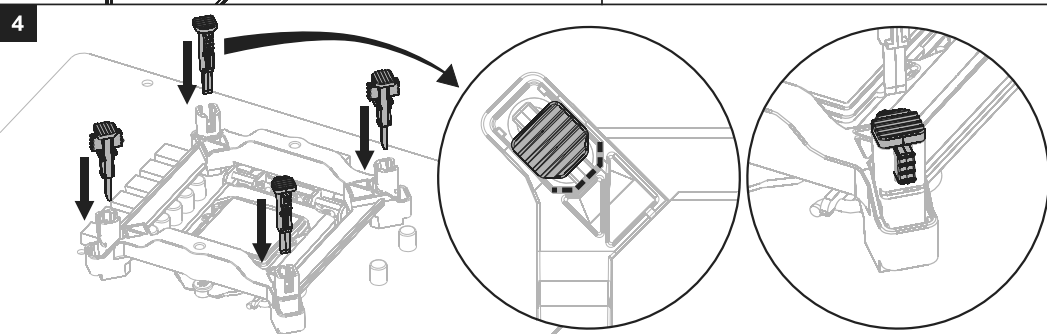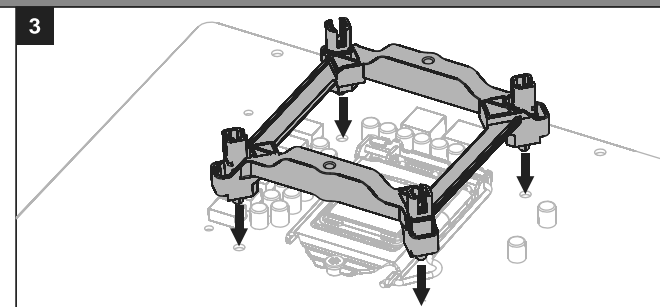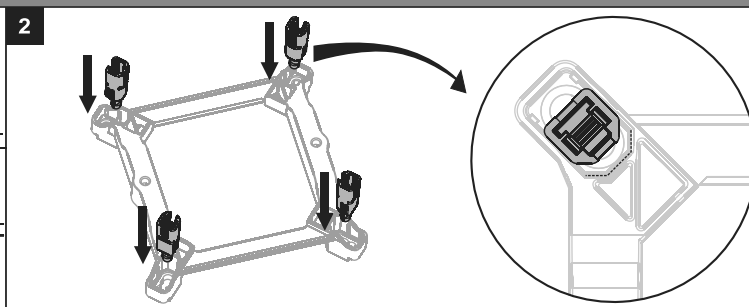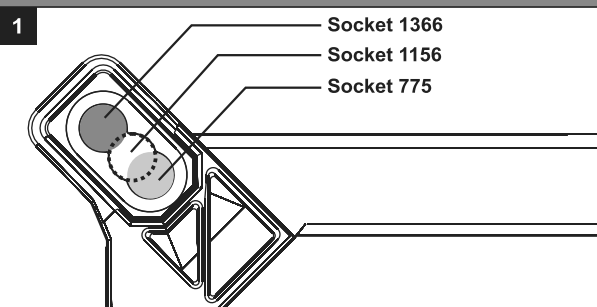


For AMD Sockets


1

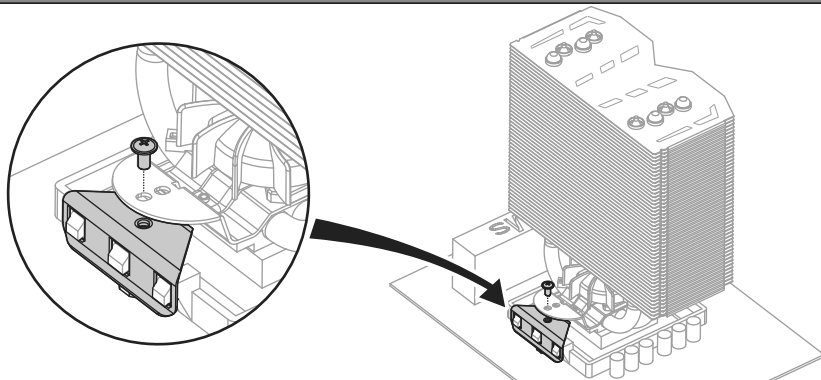


2

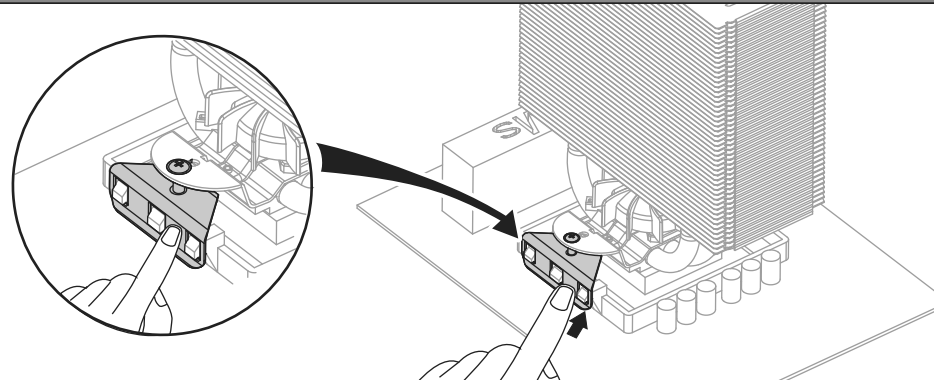


3

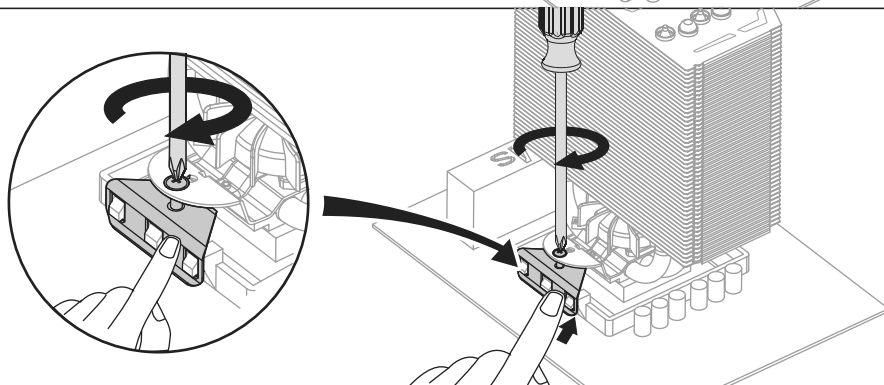


4

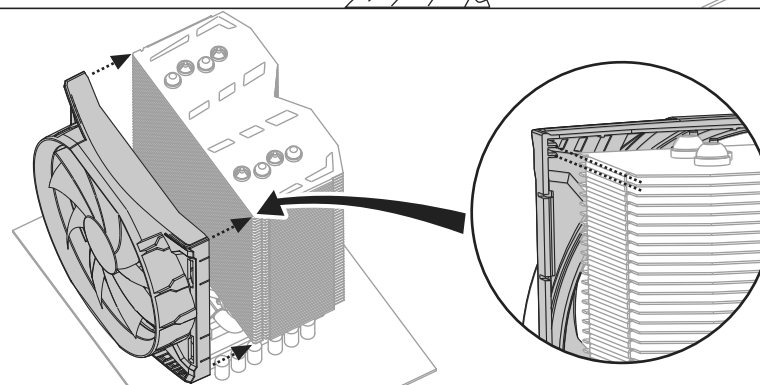

5

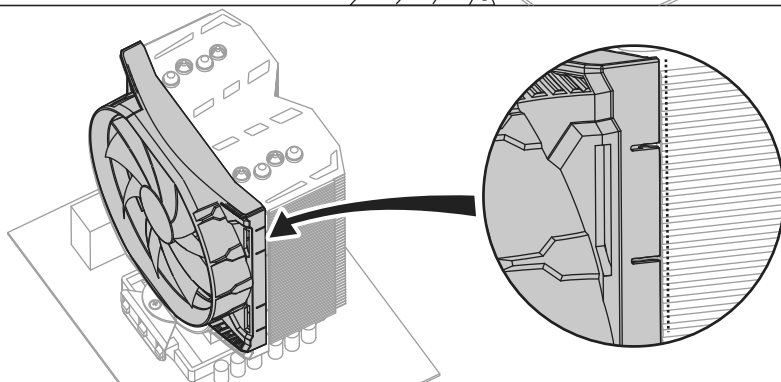

6

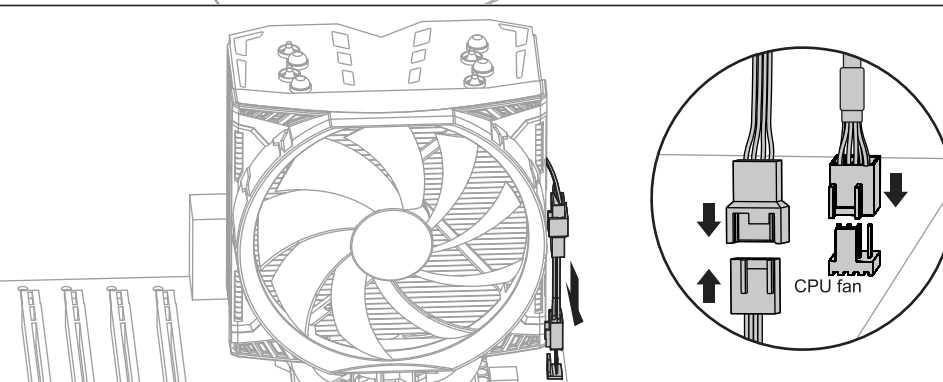

Limits of Warranty

Warranty coverage does not include the following:

- A faulty product that leads to harm or damage to other products
- Damage of product as a result of other product components
- Incorrect method of operation or use of product not for intended use
- Any form of alteration to original product
- Inability to install the product as a result of incompatibility with other components

Thermal Compound

The thermal compound is already pre-applied to the heatsink. If the cooler has to be installed a second time, we highly recommend using the ARCTIC MX-2 or the ARCTIC MX-4 from ARCTIC. Only our compound guarantees optimal performance in combination with the surface of our heatsinks.

ARCTIC Switzerland

Huobstrasse 4
8808, Pfäffikon, Switzerland
www.arctic.ac

Copyright

2010 ARCTIC Switzerland. All Rights Reserved.

No part of this manual including the products described in it, may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ARCTIC Switzerland. In no event shall ARCTIC its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.